



GOLDSTRIKE LED FILLER PANEL LIGHTS

Parts Included:

- 1 Left side filler panel light
- 1 Right side filler panel light

Installation Instructions:

1. Remove the two circled screws with a 5MM allen then pull on the fender to remove it. (Fig. 1)
2. Clean the surface on the inner edge of your saddlebags where the lights will be attached using an ammonia based cleaner to remove any wax or debris.
3. Locate the small indentation at the bottom edge of the tape on your filler panel light housing. (Fig. 2)



Indentation

4. Dry fit the filler panel light to your saddlebag. The indentation from figure 2 should line up with the line that separates the paint and plastic on your saddlebag. The main edge of the filler panel should match up to the edge of your saddlebag. Once you are satisfied with the fit of each side, peel the adhesive backing and stick the filler panel light to your saddlebag. Press and hold for 30 seconds. (Fig. 3)



Indentation

5. Open the saddlebags and remove the two side panels below the seat. Unplug the heated seat harness (Fig. A). Using a 6mm allen wrench, remove the seat screws on each side (Fig. B). Pull straight up on the front of the seat then slide the seat forward to release the rear of the seat.



Fig. A



Fig. B

G0040030, REV. -A

CIRO3D.COM



GOLDSTRIKE LED FILLER PANEL LIGHTS

6. Route the wire up on each side of the fender as shown in figure 4. Push it through the crack at the edge of the fender so it ends up under your seat. Be sure to route the wire on the OUTSIDE of the fender support bracket so it does not touch the tire.
7. Continue routing the wire as shown in figure 5. The wire should come up from the rear fender near the corners of the electronic control module and then be routed UNDER the frame rail so it is not crushed when the seat is re-installed.
8. Plug in your connectors to the Goldstrike Rear Lighting Harness part #48000, matching the color of the wires to the correct side. (Fig. 5)
9. Tuck the wires towards the rear fender so they will not be crushed by the seat.
10. Test the lights for run, turn, and brake function.
11. Re-install your seat and rear fender.

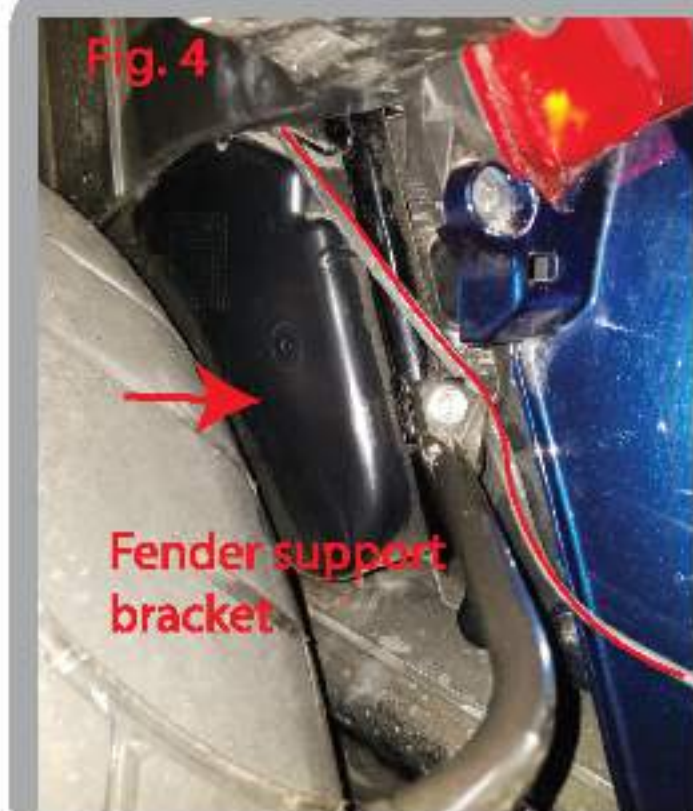


Fig. 4

Fender support bracket



Fig. 5

WARNING:
This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:
This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:
This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:
Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit our website Ciro3d.com for our complete warranty policy.