




**MOUNTING INSTRUCTIONS**  
**For 45-1696**  
**GL1800 Chrome Air Exhaust Trims**  
**2012 Model Only**

**NOTE: Read instructions thoroughly before installing. Work one side at a time.**

1. Place bike on center stand.
2. Thoroughly clean outside surface of the chrome air exhaust area where inserts will be install with rubbing alcohol pads provided.
3. Check fitment of the piece.
4. Using the silicone provided, run a bead of silicone as shown in figure 1. Note: Two sided tape can be used instead of silicone if desired. Two side tape is provided.
5. Press the accent into place. Note: You may want to use masking tape or a soft material to protect the chrome while placing the piece on the bike.
6. Using two wire ties, secure the chrome accent by wrapping the wire ties through the original radiator grill as shown in figure 2.
7. Repeat on the other side.
8. Wait at least 12 hours before removing wire ties.



**Figure 1**

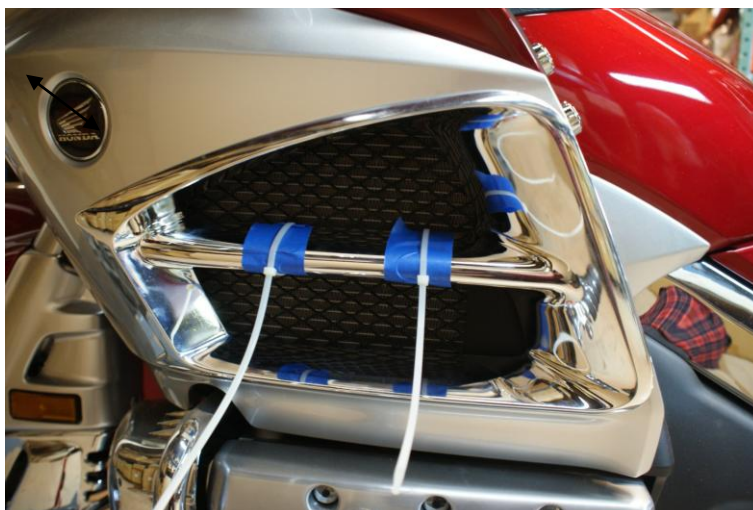

**Figure 2**