




Goldstrike™ Trunk light

Parts Included:

- 1 Trunk Light Assembly
- 4 Cable Ties

Installation Instructions:

1. Open the trunk and remove the three circled screws on each side to loosen the backrest. (Fig. 1)
2. Remove the two circled screws holding the plastic cover to the backrest. (Fig. 2)

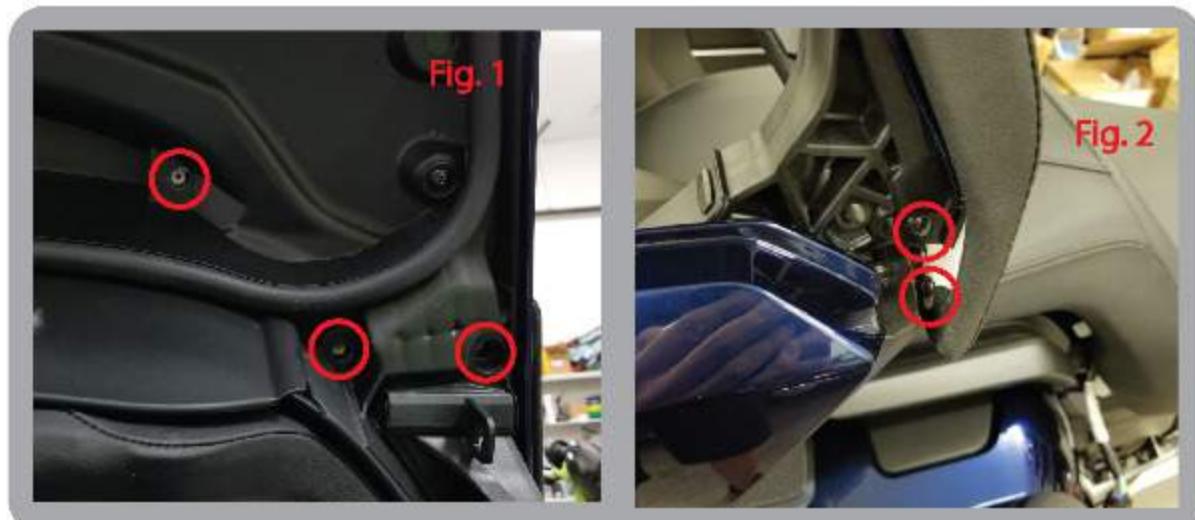

3. Remove the backrest to expose the trunk hinge screws. (Note there is a connector that must be unplugged by simply depressing the tab on the top)
4. Remove the 3 trunk hinge screws on each side. (Fig. 3)



5. Remove the lid of your trunk and set it somewhere that it will not be damaged. Remove all inner liner and latch screws. Note where the long versus short screws are located. (Fig. 4)
6. Separate the inner liner from the trunk lid and set it aside.
7. Find the center of the trunk lid, then measure down and mark 1.75" from the top edge. (Fig. 5)



7. Drill a 9/16" hole where you marked the trunk lid, large enough to feed the connectors through. A step drill works well for this. (Fig. 6)

G0048004, REV. - A

WARNING:
This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:
This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:
This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.


NOTE:
Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit our website Ciro3d.com for our complete warranty policy.

CIRO3D.COM


8. Feed the connectors through the hole and dry fit the trunk light. It should sit centered, 2mm below the upper lip of the trunk lid. Mark the edges with masking tape so after the backing is peeled, you can easily locate the correct mounting location. (Fig. 7)
9. Clean the mounting surface with an ammonia based glass cleaner to remove any wax or residue. Peel off the adhesive backing and carefully stick the trunk light where you had marked in step 8. Press and hold for 30 seconds.



10. Route the wire straight up the inner lid of the tour pack and through the factory rectangular hole at the top. Use tape to hold the wire in place. (Fig. 8)
11. Re-install the inner trunk liner, then re-install the trunk lid to its hinges from step 4.
12. Route the trunk light wire along the factory wiring harness using cable ties to secure it. (Fig. 9)

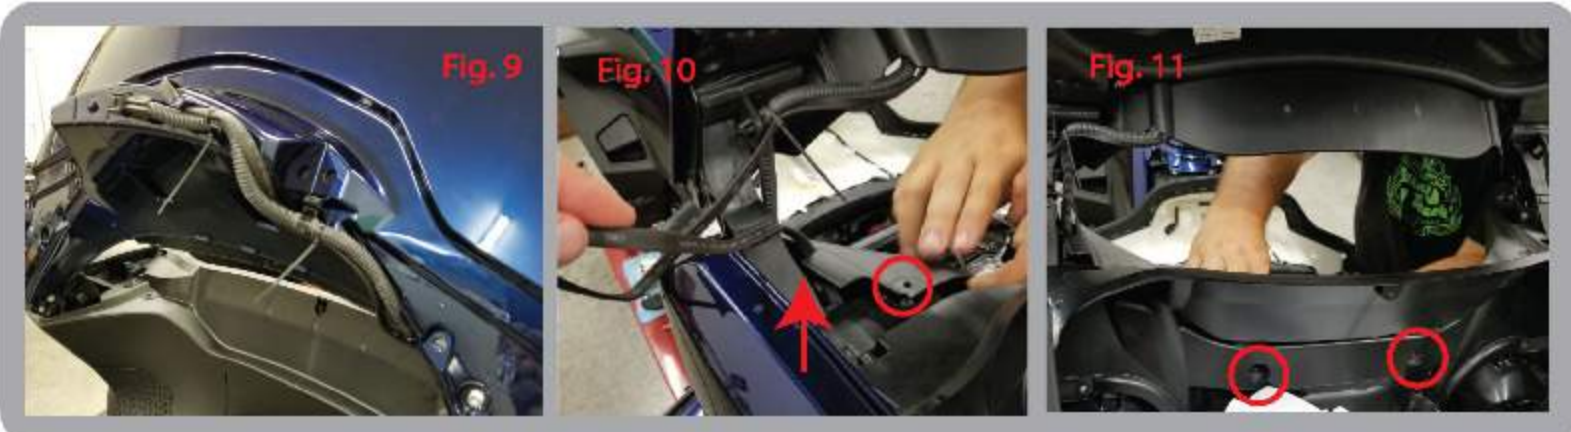

13. Open the saddlebags and remove the two side panels below the seat. Unplug the heated seat harness (Fig. A). Using a 6mm allen wrench, remove the seat screws on each side (Fig. B). Pull straight up on the front of the seat then slide the seat forward to release the rear of the seat.

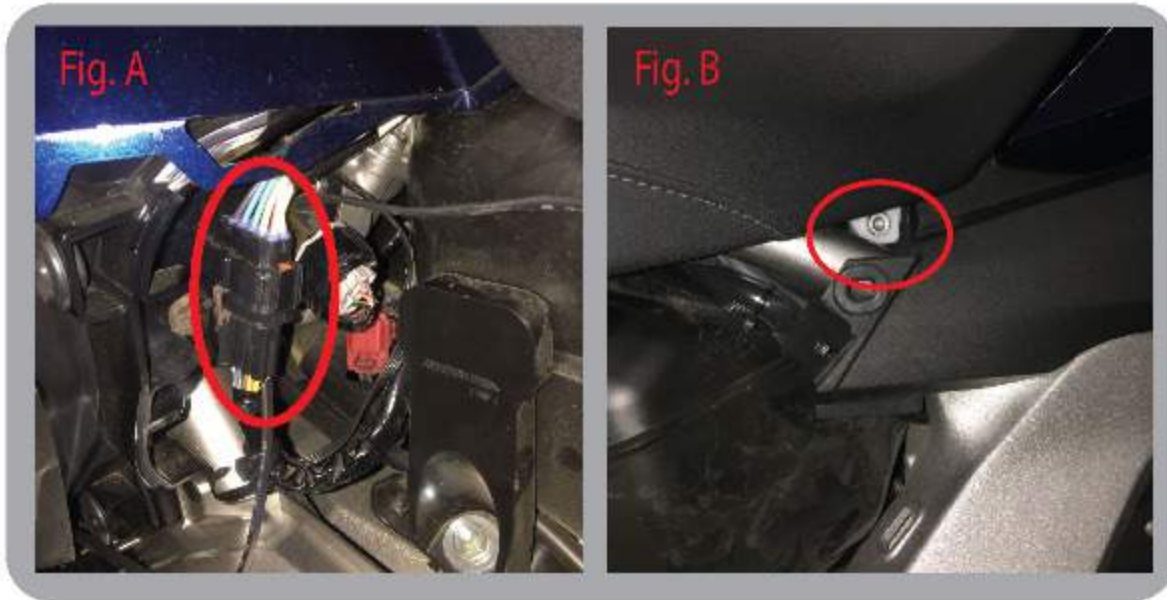

G0048004, REV. - A

14. Remove the circled screw and feed the connectors through the indicated hole on your left side trunk hinge as shown in Fig. 10. These need to end up under the seat.
15. Remove the two circled bolts on the inside of your trunk located at the front. Remove the plastic piece that they were screwed in to. This will make it easier to route the wire. (Fig. 11)
16. Route the wire as shown in Fig. 12. THE WIRE SHOULD BE INSIDE the plastic housing near the rear speakers, and the wire should be UNDER the frame rail so it is not crushed when the seat is re-installed.

17. Plug in your connectors to the Goldstrike™ Rear Lighting Harness part #48000, matching the color of the wires to the correct side. (Fig. 13)
18. Tuck the wires towards the rear fender so they will not be crushed by the seat.
19. Test the light for run, turn, and brake function.
20. Re-install your seat, backrest, and any other parts removed during installation.

