



GOLDSTRIKE™ TOUR BLADE®

- Parts Included:
- 1 Tour Blade®
 - 1 Grease Packet
 - 6 Cable Ties

Installation Instructions:

*Before installation, thoroughly clean the surface of your trunk with an ammonia based glass cleaner.

1. Set the Tour Blade® on your trunk against the backrest. Make sure it is centered and tape it in place using masking tape. (Fig. 1)
2. Open the trunk and remove the three circled screws on each side to loosen the backrest. (Fig. 2)
3. Remove the two circled screws holding the plastic cover to the backrest. (Fig. 3)



WARNING:
This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:
This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:
This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.


All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:
Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit our website Ciro3d.com for our complete warranty policy.

[CIRO3D.COM](http://Ciro3d.com)


PAGE 2

4. Remove your backrest and lay the Tour Blade® wire down across the trunk towards the rear speaker as shown in Fig. 4.
5. Remove the circled screw and feed the connectors through the indicated hole on your left side trunk hinge as shown in Fig. 5. These need to end up under the seat.
6. Remove the two circled bolts on the inside of your trunk located at the front. Remove the plastic piece that they were screwed in to. This will make it easier to route the wire. (Fig. 6)

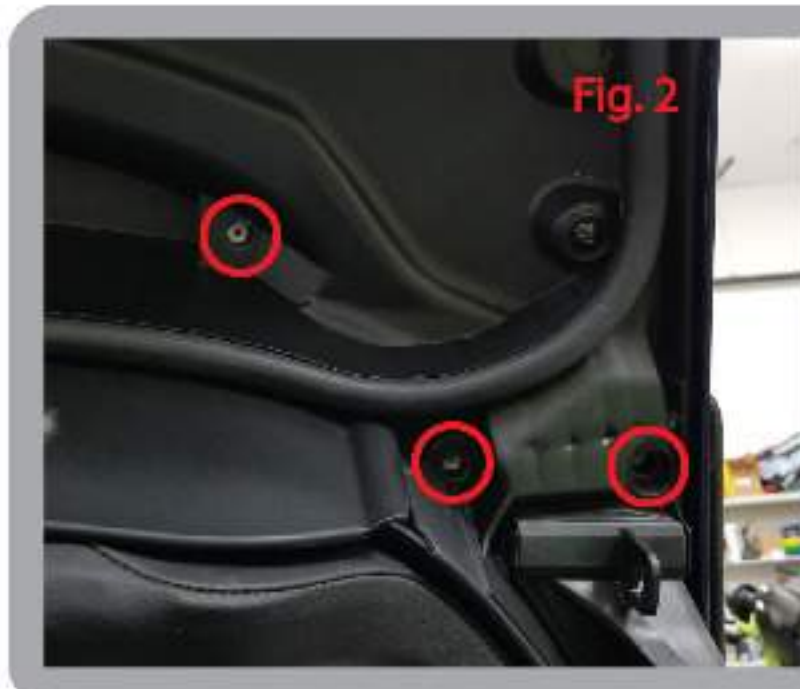


G0048200, REV. - A

7. Open the saddlebags and remove the two side panels below the seat. Unplug the heated seat harness (Fig. A). Using a 6mm allen wrench, remove the seat screws on each side (Fig. B). Pull straight up on the front of the seat then slide the seat forward to release the rear of the seat.

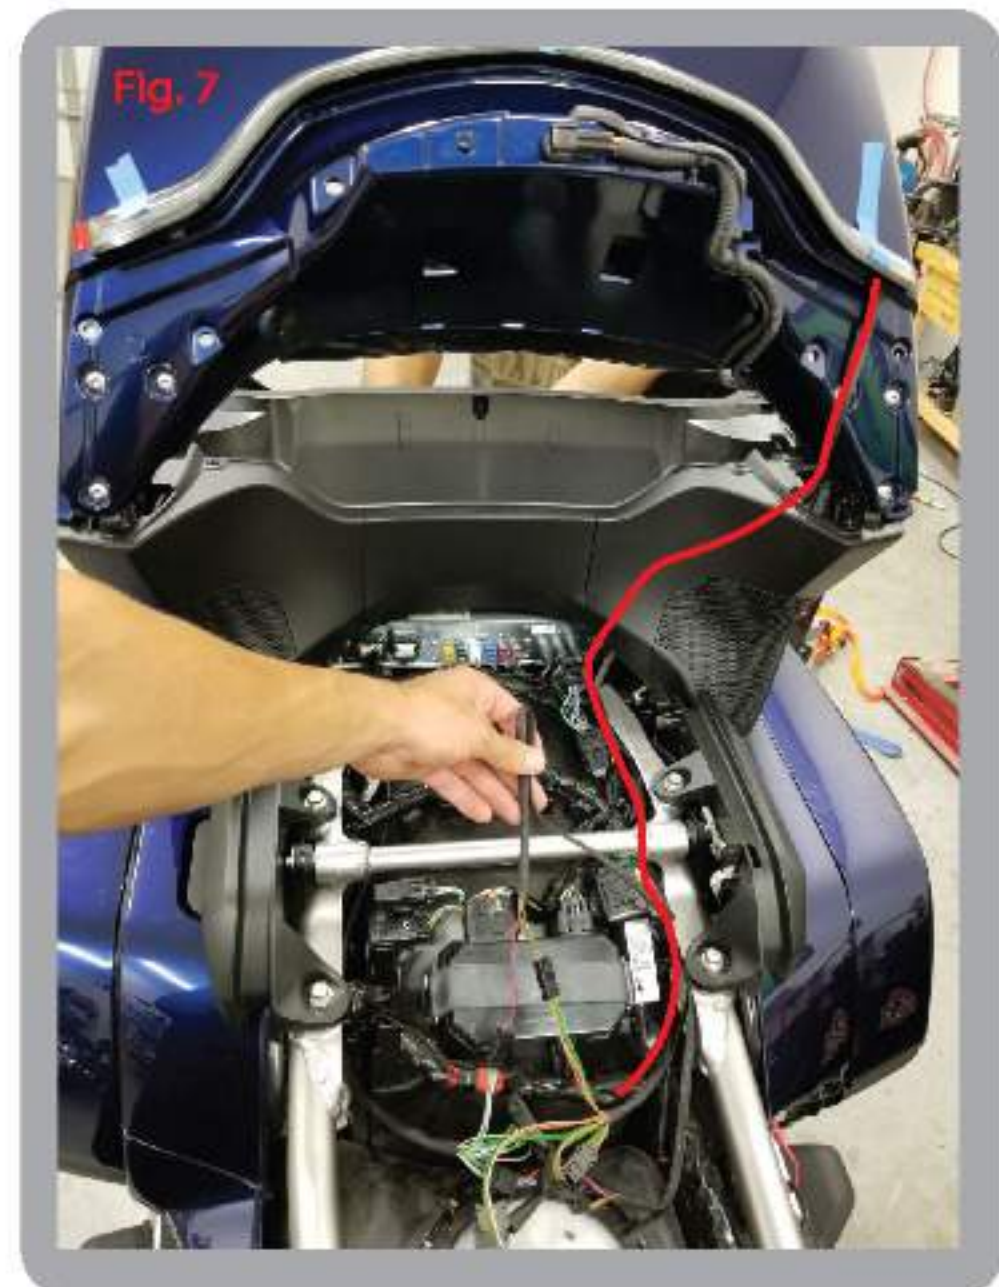

8. Route the wire as shown in Fig. 7. The wire should be inside the plastic housing near the rear speakers, and the wire should be UNDER the frame rail so it is not crushed when the seat is re-installed.
9. Plug in your connectors to the Goldstrike Rear Lighting Harness part #48000, matching the color of the wires to the correct side. (Fig. 13)
10. Tuck the wires towards the rear fender so they will not be crushed by the seat.
11. Test the light for run, turn, and brake function.
12. Re-install your seat, backrest, and any other parts removed during installation.

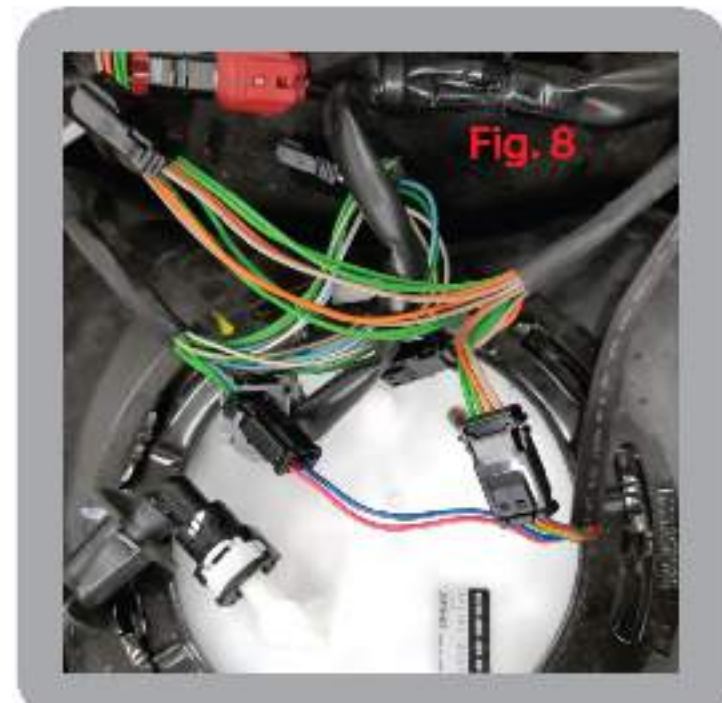

13. While holding the Tour Blade® in place, slowly pull the tab on the end of the adhesive backing until it is completely removed.
14. Be sure the Tour Blade® is centered and contouring the backrest, then press and hold for 30 seconds to complete the installation. (Fig. 9)



G0048200, REV. - A