

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-943/52-943BK

CALIPER COVERS

FITMENT: HONDA GOLDWING/GOLDWING TOUR-2018-NEWER

3/15/2019

TOOLS NEEDED: 6MM ALLEN WRENCH

4MM ALLEN WRENCH

10MM SOCKET

TORQUE WRENCH

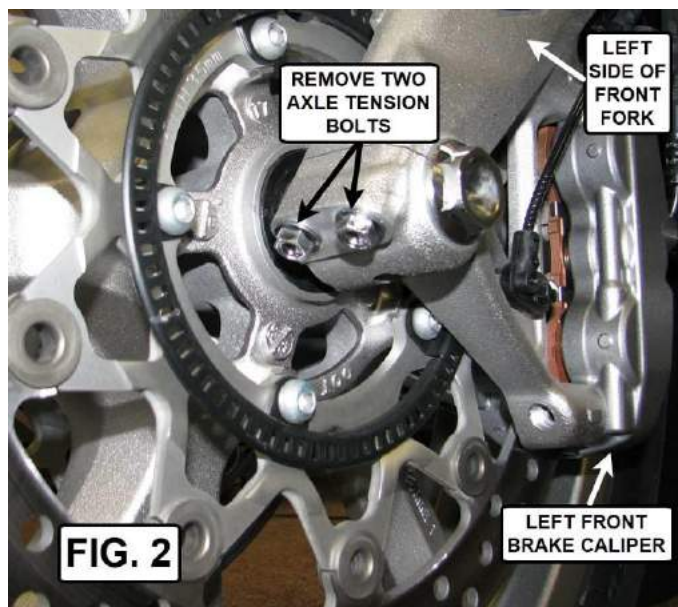
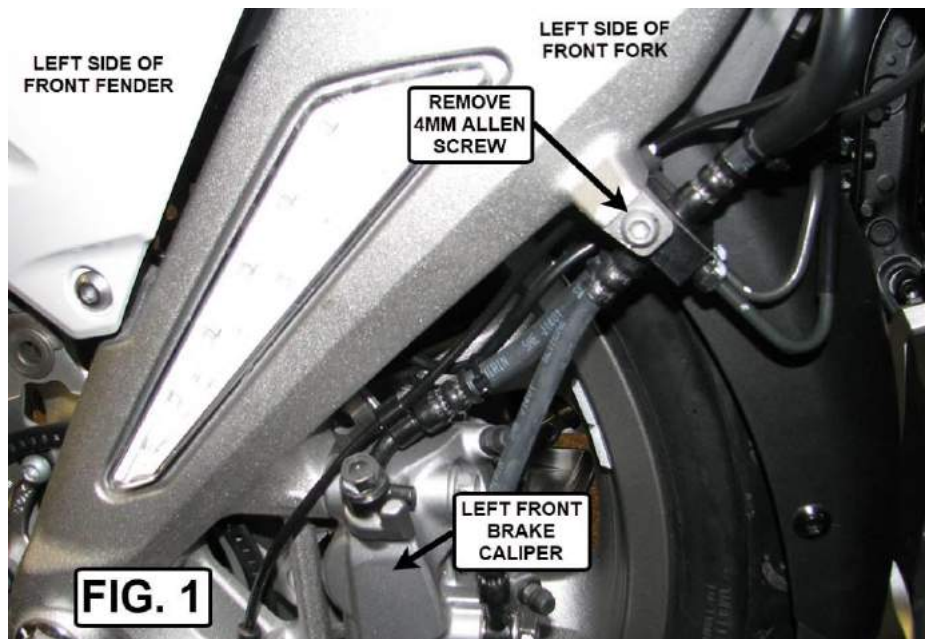
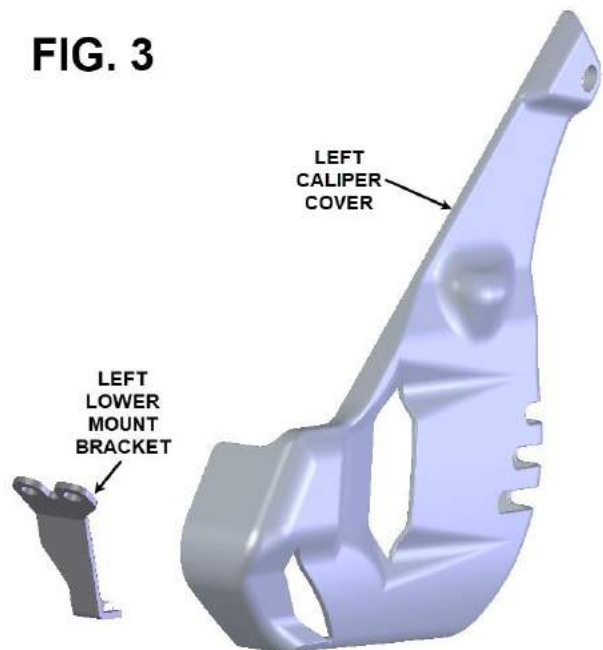
REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.

ESTIMATED INSTALLATION TIME: 20 TO 40 MIN.

INSTALLATION:

1. STARTING ON THE LEFT SIDE OF THE BIKE, USE A 4MM ALLEN WRENCH TO REMOVE THE SCREW SHOWN IN FIG. 1. (SCREW WILL NOT BE REUSED)
2. REMOVE THE TWO BOLTS AT THE END OF THE LEFT FORK (FIG. 2) AND SET ASIDE FOR NOW.
3. USE FIG. 3 TO DETERMINE THE LEFT SIDE CALIPER COVER AND LEFT LOWER MOUNT BRACKET. SET THE RIGHT CALIPER COVER AND LOWER MOUNT BRACKET ASIDE FOR NOW.
4. INSTALL THE LEFT LOWER MOUNT BRACKET AS SHOWN IN FIG. 4 USING THE TWO BOLTS THAT YOU REMOVED IN STEP 2, HOLDING THE BRACKET STRAIGHT WHEN TIGHTENING. (16 FOOT POUNDS) BRACKET MAY FLEX DOWNWARD SLIGHTLY WHEN TIGHTENED; IF NECESSARY, THE BOTTOM OF THE BRACKET MAY BE PUSHED UP SLIGHTLY TO ALIGN WITH THE SLOT IN THE CALIPER COVER.
5. USING THE SUPPLIED HARDWARE, INSTALL THE LEFT CALIPER COVER ON THE BIKE ACCORDING TO FIG. 5.
6. REPEAT STEPS 1 THROUGH 5 ON THE RIGHT SIDE.

**FIG. 3**

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

