



ISO GRIPS

6183

FOR USE WITH GL1800 HEATED GRIPS

FITS: ALL '06-UP GL1800 WITH STOCK OEM HEATED GRIPS

PARTS INCLUDED

- 1 Right Front Cover
- 1 Right Rear Cover
- 1 Left Front Cover
- 1 Left Rear Cover
- 2 ISO Sleeves
- 1 Hardware Kit including:
 - 13 4-40 x 3/8 Socket Head Cap Screw (SHCS)
 - 1 M6 x 1 x 40mm Phillips Pan Head Cap Screw (PPHS)
 - 2 End Caps
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of hex wrenches, phillips screwdriver, general window cleaner.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


RIGHT SIDE PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition.

STEP 2 Remove the stock bar ends by removing the phillips head screw, these will not be reused.

STEP 3 Identify the right side covers; see **PIC.1** to identify the sides.

-cont.-

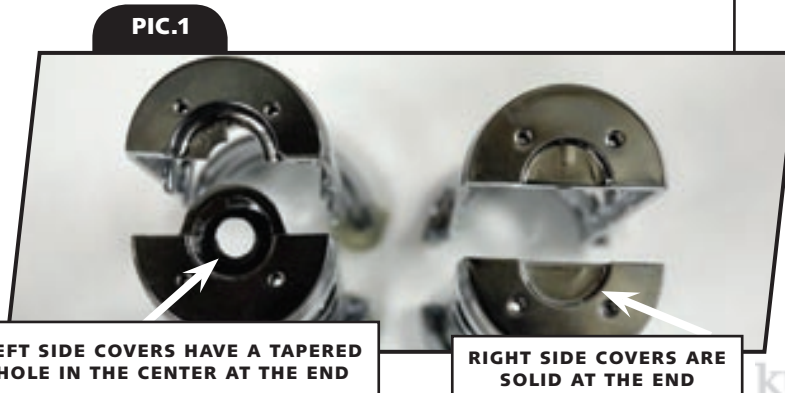

6183-13GL-0308

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Locate the ISO sleeve and identify the end that will slide on first (it is tapered on the inside edge.) See [PIC.2](#).

STEP 5 See [PIC.3](#) and [PIC.4](#) to determine front and back covers. Place the Iso Sleeve into the right front cover with the tapered end facing towards the hand controls, (see [PIC.5](#).)

STEP 6 Apply a small amount of window cleaner to the stock grips to ease the installation of the Iso grips.

STEP 7 Slide the Iso sleeve and front cover all the way on, ensuring that the grip heater wire is in the cover's slot and not being pinched.

CAUTION! It is very important to allow sufficient time for the grips to dry out before riding the motorcycle. (Roughly an hour at 70°) With two fingers check to make sure that there is no twisting of the cover before riding

STEP 8 Position the right side rear cover as shown in [PIC.6](#). Ensure that the tabs in the rear cover align with the slots in the front cover; squeeze the covers together until the tabs and slots positively engage. It may be helpful to push/pull back on the rubber pads as seen in [PIC.7](#).

STEP 9 Secure the cover with the three 4-40 x 3/8" SHCS screws from the front side, finger tighten for now, their location is shown in [PIC.8](#).

STEP 10 Position the end cap so that the four holes in the end cap align with the four holes in the covers, insert the four 4-40 x 3/8" SHCS screws; finger tighten for now. (see [PIC.8](#))

STEP 11 Making sure that the grip heater wire is not pinched, tighten all the fasteners.

STEP 12 Ensure proper throttle operation before moving onto the left side or starting the motorcycle.

LEFT SIDE PROCEDURE

STEP 13 Repeat STEP 4 through STEP 8 using the left side covers instead of right.

STEP 14 Insert the M6 x 1 x 40mm Phillips Pan Head Screw (PPHS) in the end of the grips, finger, leaving loose for now, (see [PIC.9](#).)


-cont.-

Kuryakyn


PIC.2



PIC.3

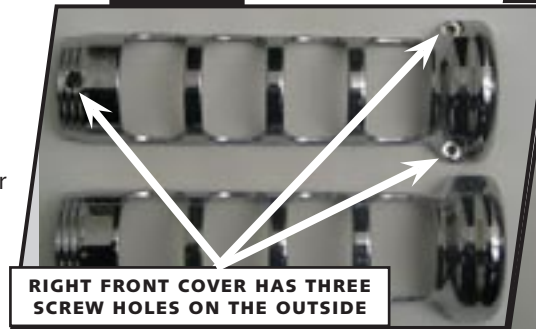

PIC.4

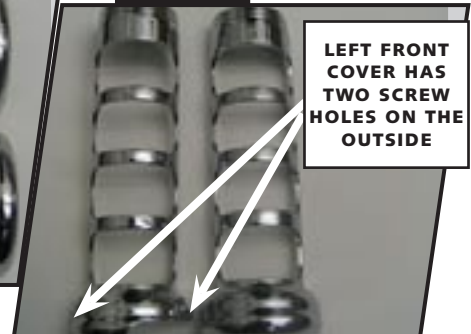

PIC.5



PIC.6



PIC.9



PIC.7



PIC.8



PAGE
2

ISO GRIPS INSTALLATION

STEP 15 Insert the two 4-40 x 3/8" SHCS screws from the front side, ensure that the grip heater wire is not being pinched and fully tighten the fasteners, (see [PIC.10](#).)

STEP 16 Tighten the M6 x 1 x 40mm PPHS screw from STEP 14.

STEP 17 Position the end cap so that the four holes in the end cap align with the holes in the covers and secure with the four 4-40 x 3/8" SHCS screws, full tightening them.

STEP 18 Ensure that all the fasteners have been tightened and that the Iso grips do not interfere with the functions of the controls before riding the motorcycle.

Ride On!

PIC.10

