



HEADLIGHT OUTER TRIM with TURN SIGNAL ACCENT 7364

PARTS INCLUDED

- 1 Right Turn Accent
- 1 Left Turn Accent
- 1 Hardware Kit Containing:
 - 4 4" Nylon Cable Ties
 - 2 "Y" Adapters
 - 2 Alcohol Pads
 - 1 Dielectric Grease Pack
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Metric Hex Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTE: '06 and later models, that do not have existing Kuryakyn front accent lighting, require the installation of Kuryakyn P/N 7300, Adapter Plug, (purchased separately) for Plug and Play wiring.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

STEP 2 Remove any grease or debris from both of the trim pieces located at the rear of the headlights (PIC 1) with soapy water and a clean rag; rinse and allow the area to dry completely. Clean the area with the included alcohol cleaning pad to remove any residue; allow the area to dry completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 3 Test fit the left Headlight Accent to the fairing. It will install over the black or chrome portion directly behind the headlight. PIC 1 Make any reference marks with a non-permanent marker or masking tape.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Rub the backing on the adhesive strip to activate the adhesive before applying. Remove the backing. Press the Headlight Accent into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. Repeat for the right side

STEP 5 Locate the rubber boot at the base of each mirror. Carefully peel this boot back away from the fairing, gently fold the mirror forward, to expose the wire connections. Pay attention to how the boot joins with the fairing; this will aid in replacing the boot in its proper position during reassembly. PIC 2

STEP 6 Referring to FIG. 1 and PIC 2, remove the bolts, washers and mounts that secure the windscreen garnish and set them aside to be reinstalled later.

STEP 7 Flip the windshield height adjustment levers to the up position. Carefully pull up on the windshield garnish at the points where the bosses are located as shown in FIG. 1 to remove the garnish from the motorcycle.

ATTENTION! Kuryakyn recommends the use of dielectric grease on electrical connections.

STEP 8 Carefully route the wire harnesses from the Accents to the connectors behind the mirrors. Use the included cable ties to secure the wiring out of harms way.

STEP 9 **For '01-'05 models:** Behind the mirror boot, locate the wiring harness with plugs. Separate the plugs and connect the supplied Y-Adapters between the stock plugs, then connect the "Y" Adapters to the Accents. PIC 3

For '06 and later models with P/N 7300 adapter: Connect the "Y" adapter to the P/N 7300 adapter harness installed between the stock plugs, then connect the "Y" harness to the Accents. PIC 3




NOTE: If you have already installed additional Kuryakyn accessory lights on the front of the bike and you do not have an extra plug in, you may use Kuryakyn P/N 7302, Multi-Plug and Play Connector, with the existing Kuryakyn wire adapter for additional plug-ins in place of the included wire adapter.

STEP 10 With the motorcycle running, test the Outer Trim Lights, running lights, and turn signals for proper operation.

WARNING! ENSURE PROPER RUNNING LIGHT AND TURN SIGNAL OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. RUNNING LIGHT OR TURN SIGNAL MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 11 Tuck any excess wire harness behind the mirror joint. Roll the rubber boot back into position against the base of each mirror. Flip the windshield height adjustment levers to the down position. Reinstall the fairing garnish and screws that were removed in Steps 6, 7 and 8.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

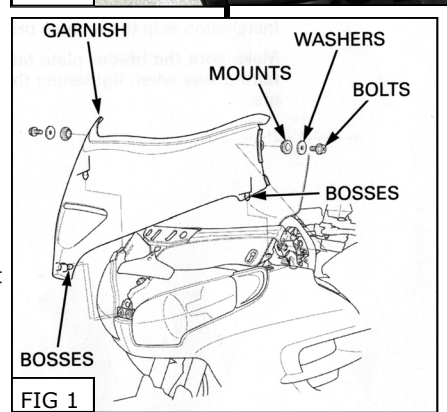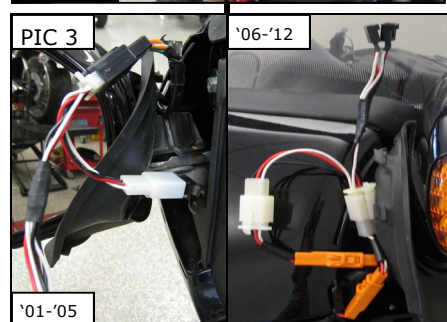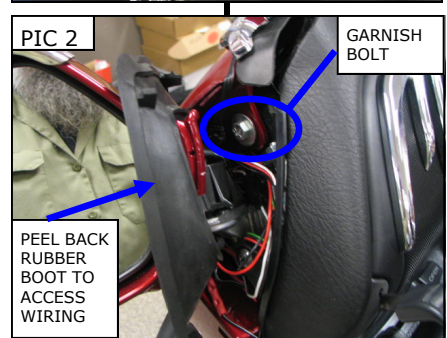

Ride On!